







# RE-BAGS

MADE BY SEWING FOR CHANGE  
 THE CHARM OF THESE BAGS IS  
 IN THE VARIETY OF PATTERNS,  
 COLORS, SHAPES AND SIZES.

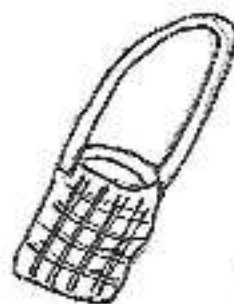


**CUTTING:** Depending on the piece of cloth, cut one of the shapes below:

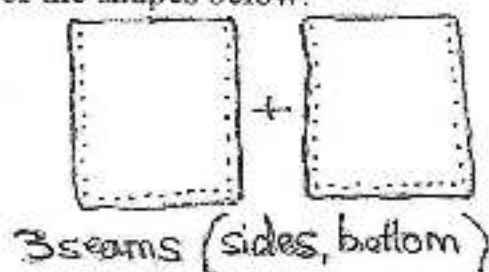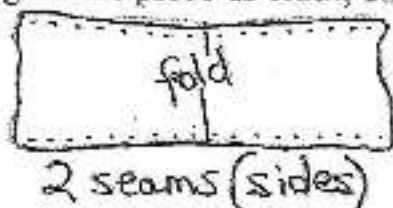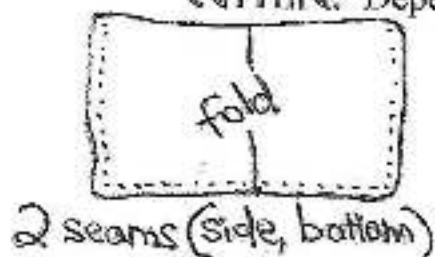

**PIN:** Pin seams as shown by dotted lines in above diagrams.

**SEWING:** Sew seams as pinned. Backstitch to start & end all seams, and trim off loose thread ends. Turn bag inside out and sew across bottom corners to create flat bottom. Seams across corners should be 3" in length. Use 3" measure to find correct placement.

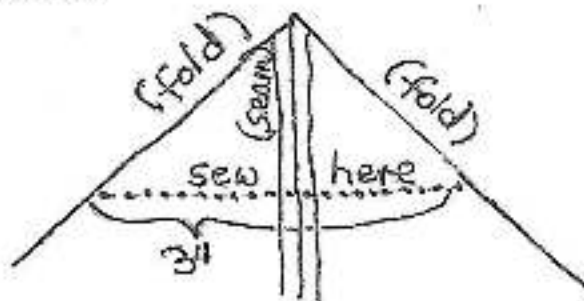

**TOP HEM:** Turn under x2 onto inside of bag, creating hem about 1" deep. There should be no raw edges visible. Pin, and sew near edge of hem.



**HANDLES:** For large bags, measure in 3-4" from sides of bag for placement of 2 handles. Handle minimum length should be 18". For smaller bags, an option is a single, longer handle attached at the side seams. Turn under 1" of tape before sewing in pattern below:

